
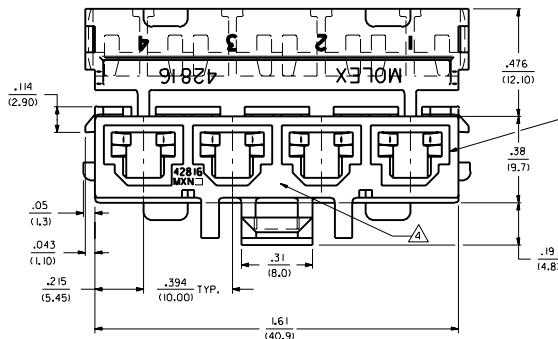
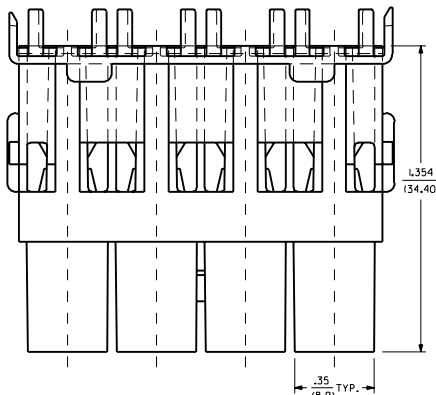
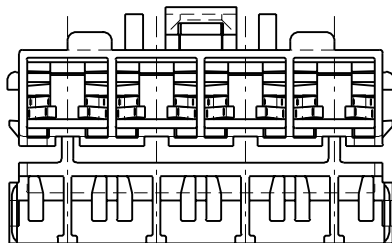
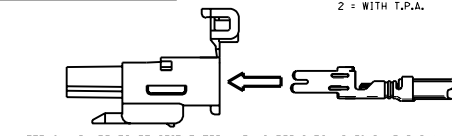
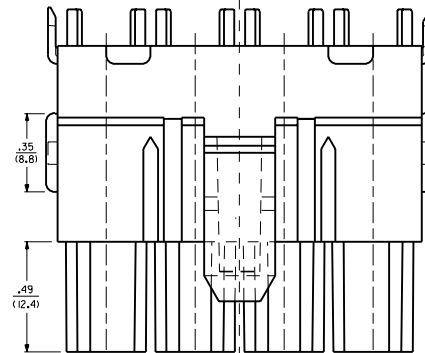



ITEM NUMBER	CIRCUIT SIZE	"A"
42816-0212	2	12.7
42816-0312	3	19.1
42816-0412	4	25.4
42816-0512	5	31.7
42816-0612	6	38.1

LEGEND:


CIRCUIT SIZE
(02-06)
T.P.A. OPTION
2 = WITH T.P.A.

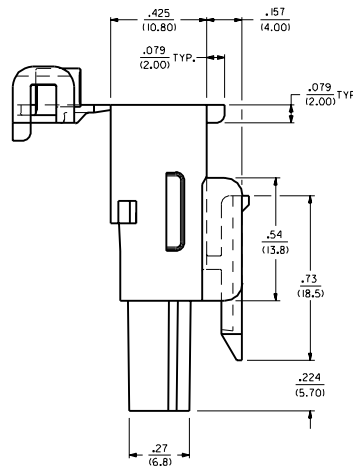

 
1. TERMINALS ARE TO BE ORIENTATED AND LOADED INTO HOUSING AS SHOWN.



2. TERMINALS ARE LOADED WHEN SEATED AGAINST FORWARD STOP AND TERMINAL LATCHES ARE SNAPPED BEHIND TERMINAL WALLS. RETENTION FORCE AT THIS STAGE = 0.5 Kg.

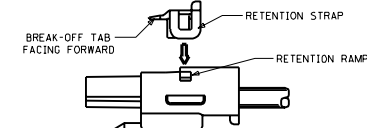


3. AFTER TERMINALS ARE LOADED INTO HOUSING, T.P.A. IS TO BE "BROKEN OFF", ORIENTATED AND INSTALLED IN THE DIRECTION SHOWN UNTIL THE RETENTION STRAPS SNAP OVER THE RETENTION RAMPS. THIS PRODUCT MUST NEVER BE USED WITHOUT THE INSTALLATION OF THE T.P.A.

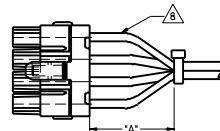

RECOMMENDED WIRE DRESSING SCHEME

NOTES:

- 1) MATERIAL:
1 = POLYESTER, PBT, UL, 94V-0,
COLOR: MOLDED BLACK.
- 2) PART IS FOR USE WITH FEMALE CRIMP TERMINAL *42815.
- 3) PART IS DESIGNED IN METRIC.
- 4) NO CORE-OUTS UNDER LATCH ON 2, 4 & 6 CIRCUIT PARTS.
- 5) PART MATES WITH MINI-FIT SR. PLUG 42818-***2.
- 6) ITEM NUMBERS THAT ARE PRECEDED BY AN "X" ARE NOT AVAILABLE.
- 7) DUE TO THE BREAKAWAY DESIGN OF THE T.P.A. COVER, A FEW MAY HAVE PREMATURELY SEPARATED FROM THEIR HOUSINGS DURING SHIPMENT. IF A HOUSING IS MISSING A T.P.A. COVER, IT CAN BE FOUND IN THE SHIPPING CONTAINER.
- 8) EACH WIRE MUST BE DRESSED SUCH THAT THE TERMINAL MAINTAINS ITS FREE FLOAT WITHIN THE HOUSING. SEE CHART FOR RECOMMENDED CABLE TIE PLACEMENT.
- 9) FOR PACKAGING INFORMATION SEE PK-42816-001

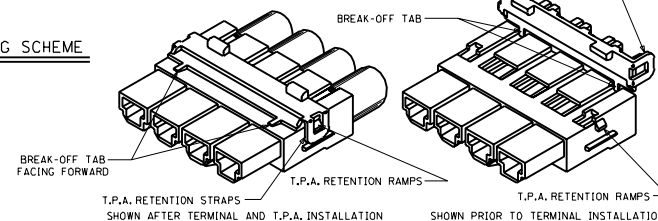

DIMENSIONS SHOWN IN METRIC UNITS		REV. LTR.		REVISIONS	
DATE	BY	DATE	BY	DESCRIPTION	REVISION
1998-11-10	010	1998-11-10	010	REV. & FINAL REL. ECU LIT0991	1
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	2
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	3
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	4
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	5
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	6
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	7
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	8
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	9
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	10
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	11
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	12
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	13
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	14
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	15
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	16
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	17
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	18
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	19
1998-11-10	010	1998-11-10	010	REV. T.P.A. PER ECU LIT0991	20

• THIS PRODUCT MUST NEVER BE USED WITHOUT THE T.P.A. •